STEP 1. SELECTING YOUR CLIP

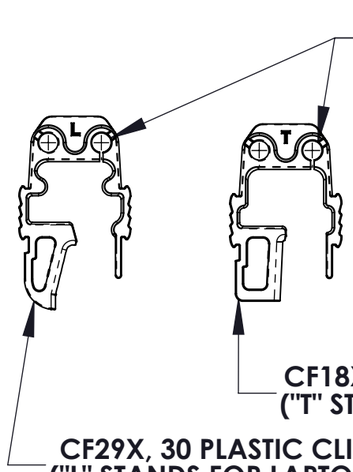

STEP 2. INSERTING YOUR CLIP

(FOR USE WITH NIGHT EYES LIGHT, REFER TO USB-POWERED NIGHT EYE INSTALLATION INSTRUCTIONS)

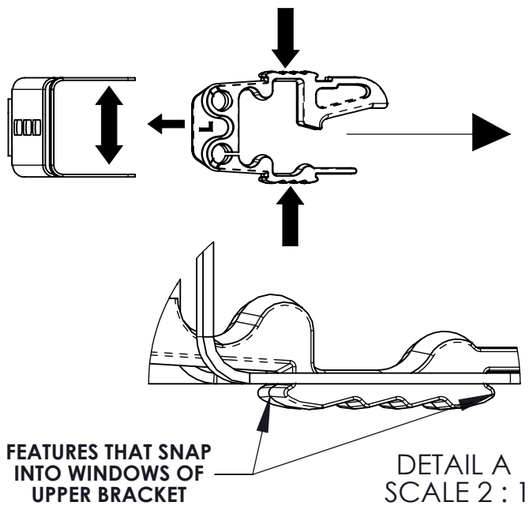

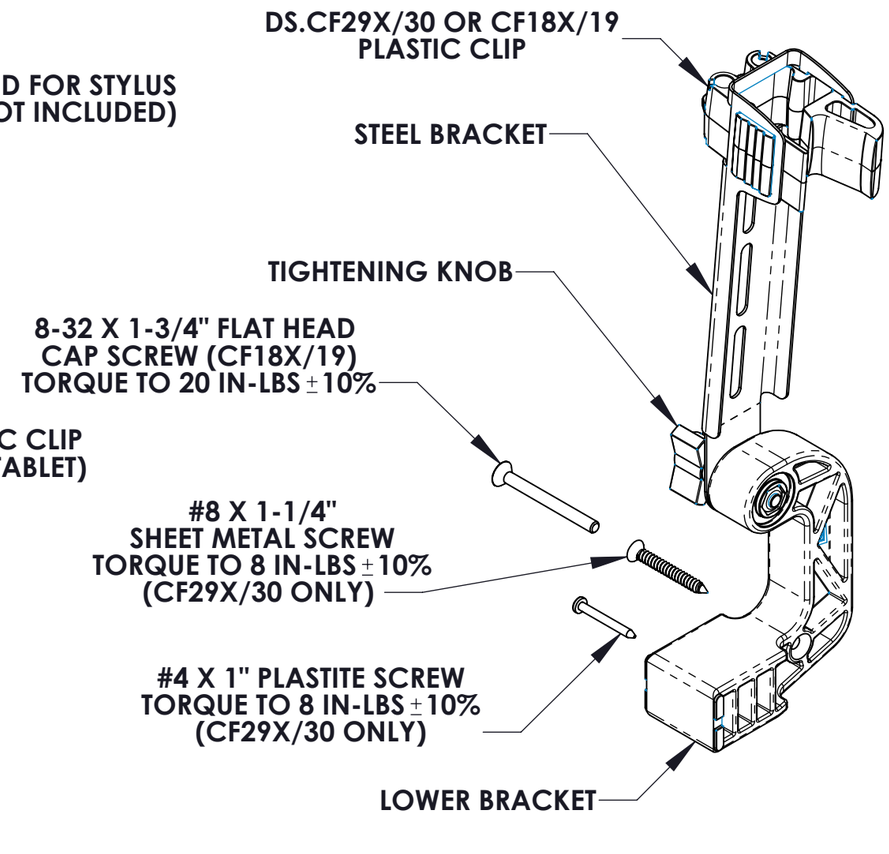

INSTALLATION INSTRUCTIONS:

SS.X MUST BE ATTACHED TO THE LEFT-HAND (DRIVER'S) SIDE OF THE DOCKING STATION:

STEP 1 - SELECTING YOUR CLIP
- IF YOU WILL BE USING THE SS.X WITH A CF-18 OR CF-19 TABLET COMPUTER, USE THE CLIP MARKED "T" FOR TABLET.
- IF YOU WILL BE USING THE SS.X WITH A CF-28, CF-29, OR CF-30 LAPTOP COMPUTER, USE THE CLIP MARKED "L" FOR LAPTOP.

STEP 2. - INSERTING YOUR CLIP
AFTER SELECTING YOUR CLIP, INSERT THE CLIP BY HAND INTO THE STEEL BRACKET AS SHOWN; CLIP WILL SNAP INTO WINDOWS OF THE STEEL BRACKET. *BE CAREFUL NOT TO OVERBEND EITHER PIECE. THIS COULD CAUSE BREAKAGE.* IF NECESSARY, USE A PAIR OF PLIERS WITH SOFT, PROTECTED JAWS AND APPLY PRESSURE IN THE LOCATIONS NOTED IN THE DIAGRAM TO ASSIST IN THE INSERTION.

STEP 3. - ATTACHING SS.X TO DOCK
REFER TO THE DIAGRAMS IN 3A AND 3B TO AID IN THIS PROCESS.

CF-18 AND CF-19 WITH "T" CLIP
REMOVE THE FLAT HEAD CAP SCREW FROM DOCK IN THE LOCATION SHOWN IN 3A. ALIGN HOLE OF LOWER BRACKET OF SS.X WITH HOLE IN SIDEMEMBER OF DOCK AND BEGIN THREADING THE 8-32 X 1-3/4" FHCS. ALIGN RIDGES OF SIDEMEMBER WITH RIDGES OF LOWER BRACKET AND TIGHTEN THE 8-32 X 1-3/4" FHCS TO 20 INCH-LBS ±10%.

CF-28, CF-29, AND CF-30 WITH "L" CLIP
ALIGN COUNTER-SUNK HOLE OF THE LOWER BRACKET WITH THE COUNTER-SUNK HOLE OF THE DOCK SIDEMEMBER AS SHOWN IN 3B; INSERT #8 X 1-1/4" SCREW INTO LOWER BRACKET. TIGHTEN THE #8 X 1-1/4" SCREW TO FASTEN THE LOWER BRACKET TO THE SIDEMEMBER. NEXT, SCREW THE #4 X 1" PLASTITE SCREW THRU THE SMALL HOLE AT THE FRONT OF THE LOWER BRACKET AND INTO THE SMALL HOLE IN THE SIDEMEMBER OF THE DOCK. TIGHTEN BOTH FASTENERS TO 8 INCH-LBS ±10%.

STEP 3. ATTACHING SS.X TO DOCK

3A

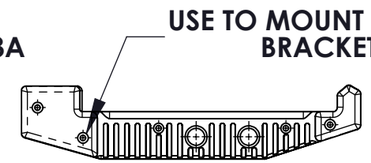

DS.CF18X/19 SIDE MEMBER

3B

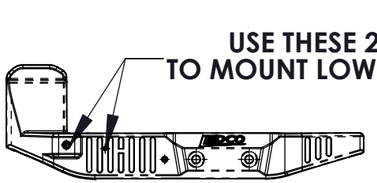

DS.CF29X/30 SIDE MEMBER

HARDWARE KIT CONTENTS:

DESCRIPTION	QTY.
PLASTITE SCREW - #4 X 1" - PAN HEAD	1
SHEET METAL SCREW - #8 - 1-1/4" L - FLAT HEAD	1
SCREW - 8-32 X 1-3/4" FHCS	1

DRAWING NUMBER:
SS-0018-IS-C (SHEET 1/2)

WARNING: ALL *LEDCO* PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING *LEDCO* MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IN INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.

PRODUCT DESCRIPTION

TO BE USED IN CONJUNCTION WITH PANASONIC DS.CF18X, 19, 29X, 30 TOUGHBOOKS.

PRODUCT I.D.
SS.X
(DS.CF18X/19/29X/30)

DATE
04-20-07

PRODUCT NAME
SCREEN STIFFENER ASSEMBLY

LEDCO
877-88-LEDCO
www.ledco.net

WEIGHT: (LBS)
0.38

REV. DATE
01-22-08

Screen Stiffener
Installation Do's and Don'ts:

Do:

1) Understand how your vehicle's airbag deploys. Check with the vehicle manufacturer or call LEDCO for assistance.
2) Install in an "air bag safe" zone; typically, the Left-Hand (Driver's) side of the dock.
3) If you plan to use the stylus holder in the Screen Stiffener head, connect the stylus to a fixed portion of the computing system with a tether no greater than five inches long.

Don't:

1) Mount your Screen Stiffener in front of a zone where an air bag could deploy.
2) Use the stylus holder to store items which are not properly tethered to a fixed portion of the computing system.

Ford Crown Victoria Example: Recommended Screen Stiffener Installation Zone

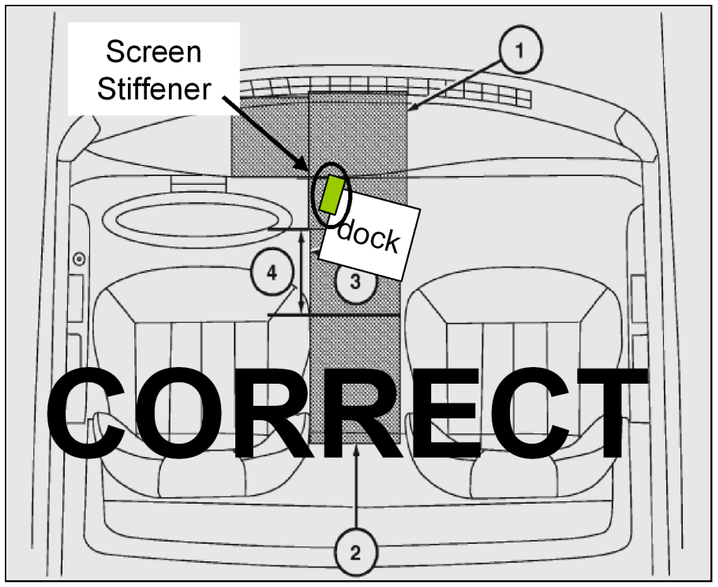

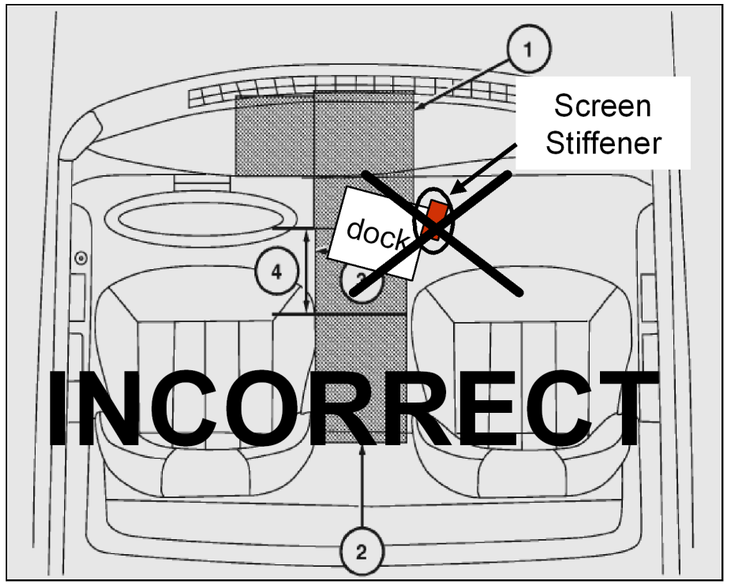

Dark gray area indicates region that is completely out of airbag deployment zone

(1) Area on top of instrument panel. **Equipment must not interfere with driver visibility.**
(2) Area on tunnel between seats
(3) 229 mm (9 in)
(4) 305 mm (12 in)

Source –
Ford Motor Company / LEDCO study

For illustration purposes

10.4.2007

DRAWING NUMBER:
SS-0018-IS-C (SHEET 2/2)

WARNING: ALL *LEDCO* PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING *LEDCO* MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IN INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.

PRODUCT DESCRIPTION

TO BE USED IN CONJUNCTION WITH PANASONIC DS.CF18X, 19 , 29X, 30 TOUGHBOOKS.

PRODUCT I.D.	DATE
SS.X (DS.CF18X/19/29X/30)	**04-20-07**

PRODUCT NAME
SCREEN STIFFENER ASSEMBLY

LEDCO
877-88-LEDCO
www.ledco.net

WEIGHT: (LBS)

REV. DATE
01-22-08